


# TimeIt

## Digital Photocell Weekly Timer

3-Wire Grounded Outlet and Plug  
 Rated: 125V/15A/1875W Tungsten/60Hz  
 6 in (15cm) AWG 14/3 SJT vinyl cord

Toll-Free Customer Support: 1.800.730.3707

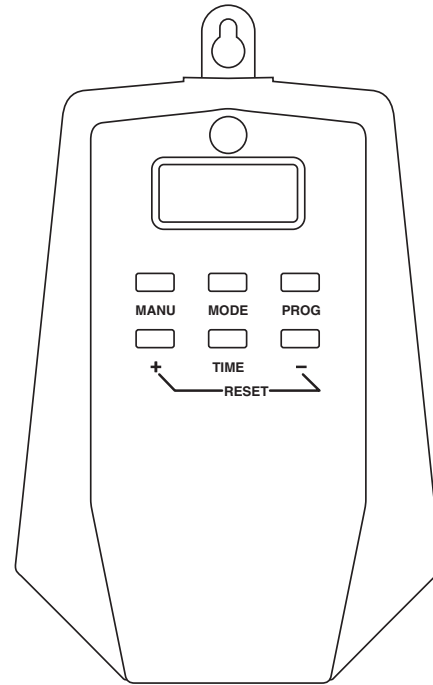

### INITIAL USE:

Before initial use, please plug in your timer for at least 1 hour to charge the internal battery. After the LCD display appears, your unit will be ready for programming.

### RESET:

Press the "+" and "-" buttons at the same time to reset your timer. This will clear all programmed settings.

### SET CURRENT TIME:

- 1 Press and hold the "TIME" button to enter the current time. First, set the day of the week: press "+" or "-" button to set today's day.
- 2 Press the "TIME" button to enter the hour setting. Press the "+" or "-" buttons to set the current hour. Be sure that AM or PM appears correctly.
- 3 Press the "TIME" button to enter the minute setting. Press the "+" or "-" buttons to set the current minute.
- 4 Press the "TIME" button to finish setting the current time and return to normal display.

### SET MODE:

Press & hold the "MODE" button to scroll between the different Mode settings:

Display	Mode	Explanation
	Digital Timer	On/Off at your exact programmed times
	Photocell Countdown Timer	On at Dusk or On immediately, Off after 1-12 hours
	Digital Timer + Photocell	On at Dusk, Off at your exact programmed times

### SET PROGRAM:

After choosing your mode, set the timer program by holding the "PROG" button for 3 seconds, and then follow the appropriate section below.

#### SET PROGRAM: DIGITAL TIMER

- 1 The first setting is "PROG 1 ON" which should appear on the screen. Set the desired day of the week setting for your timer using the "+" or "-" button to scroll between choices. You can select each day individually, Monday to Friday, Saturday/Sunday, or the entire week. To have your timer turn On/Off at the same times every day of the week, be sure to push "+" until all 7 days of the week are lit up for both PROG 1 ON and PROG 1 OFF.
- 2 Press "MANU" to enter the "PROG 1 ON" hour setting. Press the "+" or "-" to choose the desired hour for your timer to turn ON. Be sure to cycle through until AM or PM appears correctly.
- 3 Press "MANU" to enter the "PROG 1 ON" minute setting. Press the "+" or "-" to choose the desired minute for your timer to go on.
- 4 Press the "PROG" button to enter the "PROG 1 OFF" setting. Repeat steps 2 & 3 to set your desired Off time.
- 5 You may now either press the "PROG" button to enter additional programs (up to 8), or press the "TIME" button (or wait 15 seconds) to store your program. Your timer will now show the current set time and is ready for use.

#### SET PROGRAM: PHOTOCCELL COUNTDOWN TIMER

- 1 The first setting is "PROG 1 ON". Set the desired day of the week program by pressing the "+" or "-" buttons. You can select each day individually, Monday to Friday, Saturday/Sunday, or an entire week. To have your timer turn On and Dusk and Off at the same time every day of the week, be sure to push "+" until all 7 days of the week are lit up for both PROG 1 ON and PROG 1 OFF.
- 2 Press "MANU" to enter the hour setting. Press the "+" or "-" to set:

Display	Explanation
d	Dusk to Dawn – On at sundown, Off at sunrise
d:01 to d:12	On at Dusk, Off 1 to 12 hours later
S:01 to S:12	On immediately, Off 1 to 12 hours later

- 3 You may now either press the "PROG" button to enter additional programs (up to 8), or press the "TIME" button (or wait 15 seconds) to store your program. Your timer will now show the current set time and is ready for use.

#### SET PROGRAM: DIGITAL TIMER + PHOTOCCELL

- 1 The first setting is "PROG 1 OFF". Set the desired day of the week program by pressing the "+" or "-" buttons. You can select each day individually, Monday to Friday, Saturday/Sunday, or an entire week. To have your timer turn On and Dusk and Off at the same time every day of the week, be sure to push "+" until all 7 days of the week are lit up for both PROG 1 ON and PROG 1 OFF.
- 2 Press the "MANU" button to enter the "OFF" time hour setting. Press the "+" or "-" to set. Be sure to cycle through until AM or PM appears correctly.
- 3 Press the "MANU" button to enter the "OFF" time minute setting. Press the "+" or "-" to set.
- 4 You may now either press the "PROG" button to enter additional programs (up to 8), or press the "TIME" button (or wait 15 seconds) to store your program. Your timer will now show the current set time and be ready for use.

#### MANUAL OVERRIDE:

Press the "MANU" button to choose the timer status:

Display	Explanation
ON	Continuously ON
OFF	Continuously OFF
AUTO	Timer will turn On/Off according to program settings

**SAVE THESE INSTRUCTIONS!**